


# Every<sup>™</sup> Service. INSITE.<sup>™</sup>

Service And Diagnostic Software

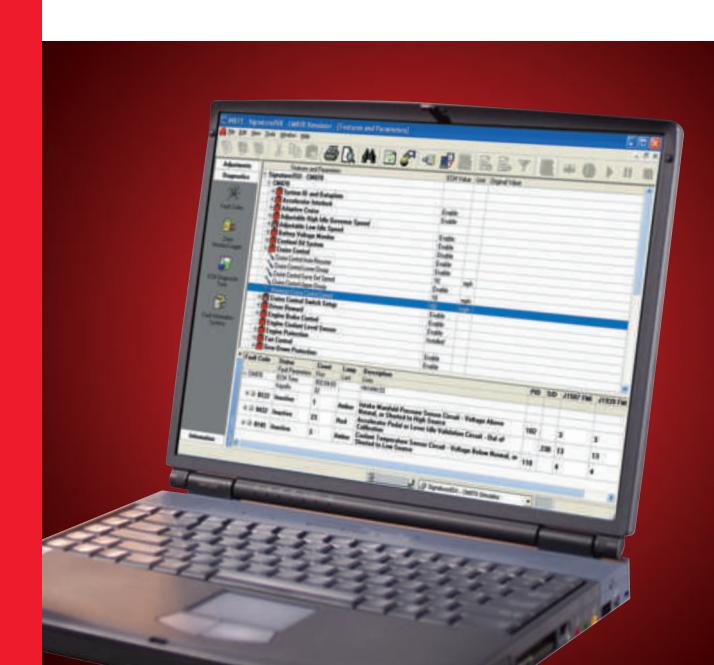

## More Uptime. Every<sup>™</sup>Time.


INSITE™ is a PC-based software application that provides quick and easy access to your engine's electronic performance information, which enables faster service turnaround times. INSITE helps ensure accurate procedures and diagnoses and limits downtime while increasing productivity and profits.

Cummins INSITE software supplies engine information quickly, getting the inside details you need. No matter what kind of equipment you run, INSITE is the one support product to have in your virtual toolbox to fit every Cummins electronic engine.

#### **Delivering Every Detail.**

INSITE can provide your business with:

- Trip and vehicle information
- Parameter and feature adjustment
- Accurate problem diagnosis
- Complete wiring diagrams and sensor location maps
- Step-by-step troubleshooting information
- Fault tree information
- Fault code and symptom-based diagnostics
- Engine diagnostic tests
- Tools to create templates for a group of vehicles

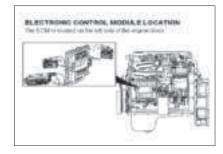

- Fleet management/driver reward programs
- Audit trail information
- Enhanced Electronic Control Module (ECM) security

### A Version To Meet Every Need.

INSITE is offered in four functional levels: Basic, Lite, RSGR and Pro, ranging from a "read only" access level for the do-it-yourselfer to full-function access and capability for the service professional.

INSITE<sup>TM</sup> Lite, INSITE<sup>TM</sup> RSGR and INSITE<sup>TM</sup> Pro are subscription programs, with automatic shipment of software updates as they are released. This provides you with the latest in features, functions and new engine support. INSITE<sup>TM</sup> Basic is offered as a one-time purchase without updates.

FEATURES	BASIC	LITE	PRO
	[Head-only]	[+ Ad[ Settings]	[P Lord Calk]
Wen Trip Information	4	1000	
View Fault Trees	V	97	
Wew Trauble Shooting Steps		- V	
View Parameter Settings	- 4	V.	-
View Feature Settings		4	
Wew Wiring Diagram.		1	- 1
View Engine Dataplate	4	- 6	4
Driver Revents	2	2	- 2
Fault Information System	× .	- V	- V
Data Montter / Lagger	- 2	€.	4
Reset Trip Information		- 2	
Reset & Clear Fault Codes		· ·	
Set Engire Features (soloff)		- ×	
Set / Adjust Parameters		- 20	
Set / Change DOM Passwords			
Create Settings Templatus		₹:	
Create Work Orders / Jobs		- V	di
ZAF-IT Functionality		- 2	4
Special ECM Team		×.	-
Reflects INC. INC Adapters		- 2	
Read / Netreve Calibration Piles		- **	
Load Engine Calibrations			- 7
- Install line Festures			- 40
- Haragioner Upgrades			

INSITE requires one of our INLINE™ adapters to communicate with your engine. This adapter translates communications between the INSITE software on your PC and your engine's ECM.

#### **Every Question. Answered.**

To determine which INSITE level your business needs, or to obtain an INLINE adapter, contact your local Cummins distributor. Additional information is available on our web site at insite.cummins.com.



Cummins Inc. Box 3005 Columbus, IN 47202-3005 U.S.A.

Phone: 1-800-DIESELS (1-800-343-7357) Fax: 1-800-232-6393 Internet: quickserve.cummins.com

Bulletin 3606261 Printed in U.S.A. Rev. 3/10 ©2010 Cummins Inc.